

AB100 ROPE LIGHT USER DIRECTIONS

For specific Henri Studio fountains, follow the fountain set-up instructions to know how to install the AB100 in that specific fountain.

CAUTION:

- 1) The AB100 Rope Light is a safe low voltage LED light set made for long-term underwater use. It is made to be powered by the transformer included. Do not plug this light set into any other transformer. Do not use with any transformer which has not been satisfactorily tested by UL, ETL, or other comparable agency.
- 2) The AB100 Rope Light has been tested for use in water only. Do not use in salt water and do not use bleach or water colorants.
- 3) Users are responsible to follow their own local electrical codes.
- 4) Do not strike or crush the rope light. Take care to protect it from damage.
- 5) Make sure, when plugging the power cord into the transformer, that the cord plugs into the underside of the transformer.
- 6) Whenever you need to reach into the water where the AB100 is placed, always first unplug from power before touching the water.

CONTROLLER OPTIONS:

Besides on and off, the multiple functions of the controller include:

- 16 different color selection buttons (including white).
- top left button brightens the color each time you push it.
- next button dims the color each time you push it.
- “Flash” cycles through seven colors, changing every second or so.
- “Strobe” transitions colors in a fast, seamless display,
- “Fade” transitions colors more slowly,
- “Smooth” transitions colors very gradually.

TO REPLACE BATTERY:

Follow instructions on the back of hand unit. Squeeze release and pull open battery tray, replacing battery with a new size CR2025 3-volt battery.

Online Resources	
Products:	www.henristudio.com/products
FAQs:	www.henristudio.com/faq
Warranty:	www.henristudio.com/warranty
Contact :	www.henristudio.com/contact-us

